

# MBU Bluetooth (BT) upgrade Instruction Guide


Please go to [www.triamp.com.tw](http://www.triamp.com.tw)  
[Download] section for software download.

- Download the firmware driver :“CK/MBU Bluetooth Firmware Upgrade Platform “
- Download the latest BT firmware.
- Unzipped both BT firmware driver file and latest BT firmware
- Save the files on the computer desktop or into any file folder that is easily located.

Account: customer  
Password: customer



Triamp Technology offering the complete OEM/ODM services worldwide!!

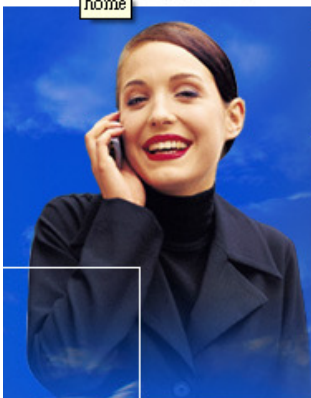

Triamp Technology, Ltd.

### DOWNLOAD

[Note: In order to power up the MBU and do the upgrade, it requires a Nokia 6230/6310 charger. If you don't have the charger, please purchase in any electronic/ mobile stores.]

## Firmware Driver [Page 1] Count : 9

#### ▶ Pre-installation Software

- ▶ \*CK/MBU Bluetooth Firmware Upgrade Platform (1.22MB) - Must install for the first time
- ▶ \*CK/MBU CPU Software Upgrade Platform Ver. 2.0 (182KB) - Must install for the first time

- ▶ CK250
- ▶ CK380
- ▶ CK390
- ▶ CK391

### Firmware Version


- ▶ MBU-1000
- ▶ MBU-2000

- ▶ Upgrade Instructions and Other Guides
- ▶ Marketing and Promotion


#### PRODUCTS

- ▶ Bluetooth Handsfree car Kits and Upgrade Kits
- ▶ Non-Bluetooth Handsfree car Kits and Upgrade Kits
- ▶ Handsfree Car Kits
- ▶ Optional Accessories

## Step 1 : Double click to install BT set up


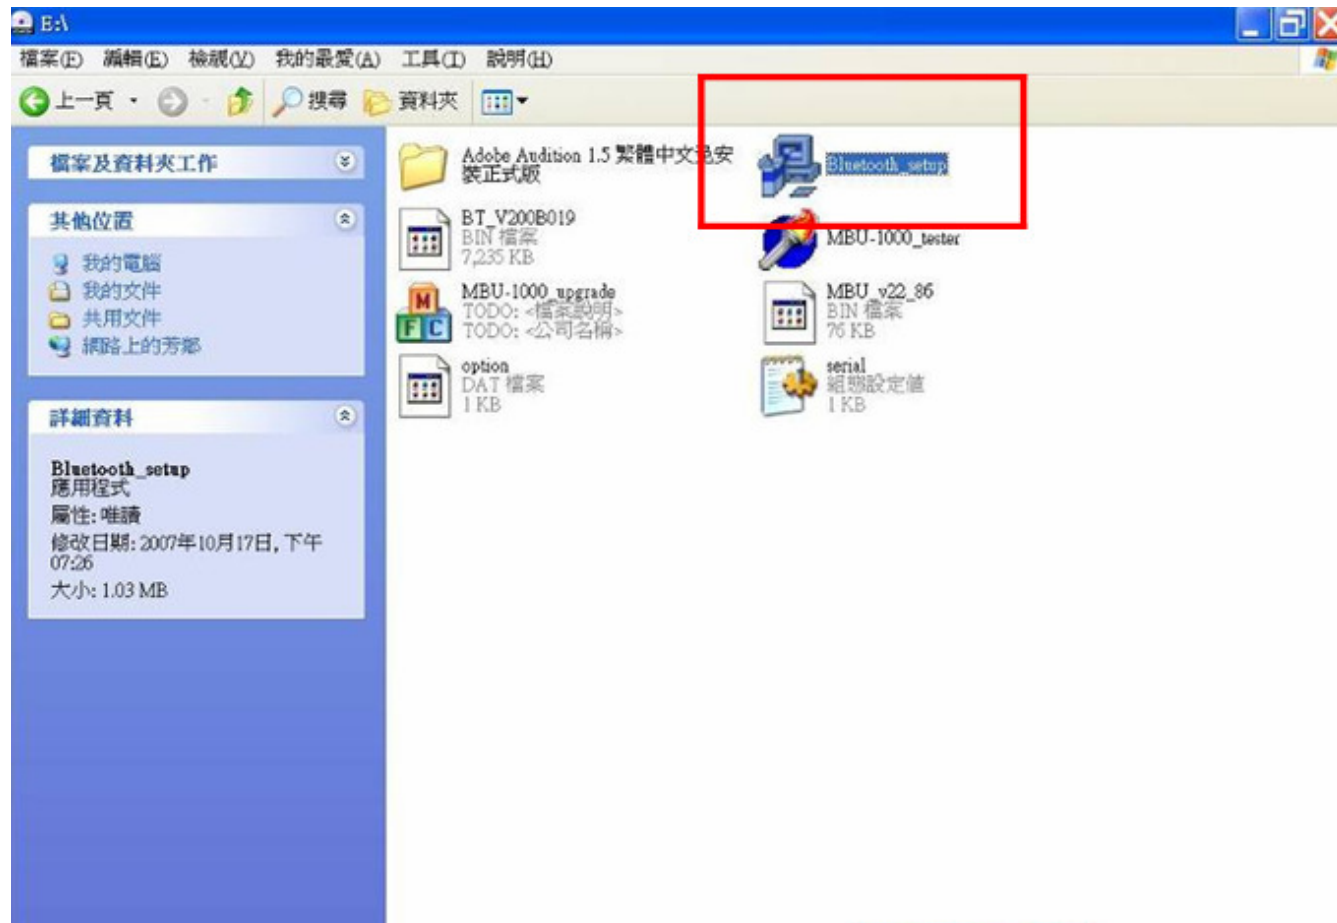



## Step 2: Click “Next” to install

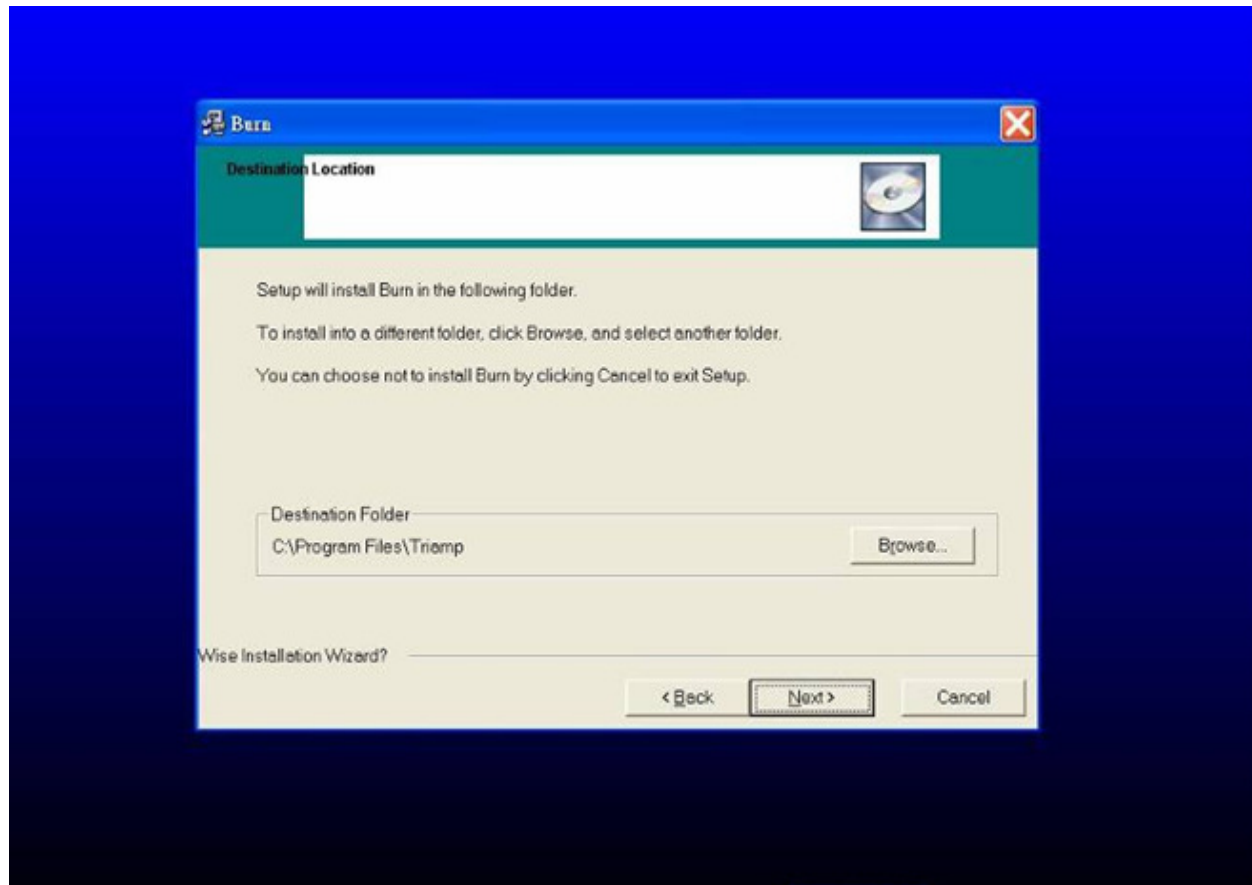


After installation, you will see a “Burn” icon

**Step 3 : Click on icon to open BT file and click on “Register”. A window with a Hardware ID will pop up. Please copy and paste the ID and email to [sales@triamp.com.tw](mailto:sales@triamp.com.tw). We will give you a License Code in return.**

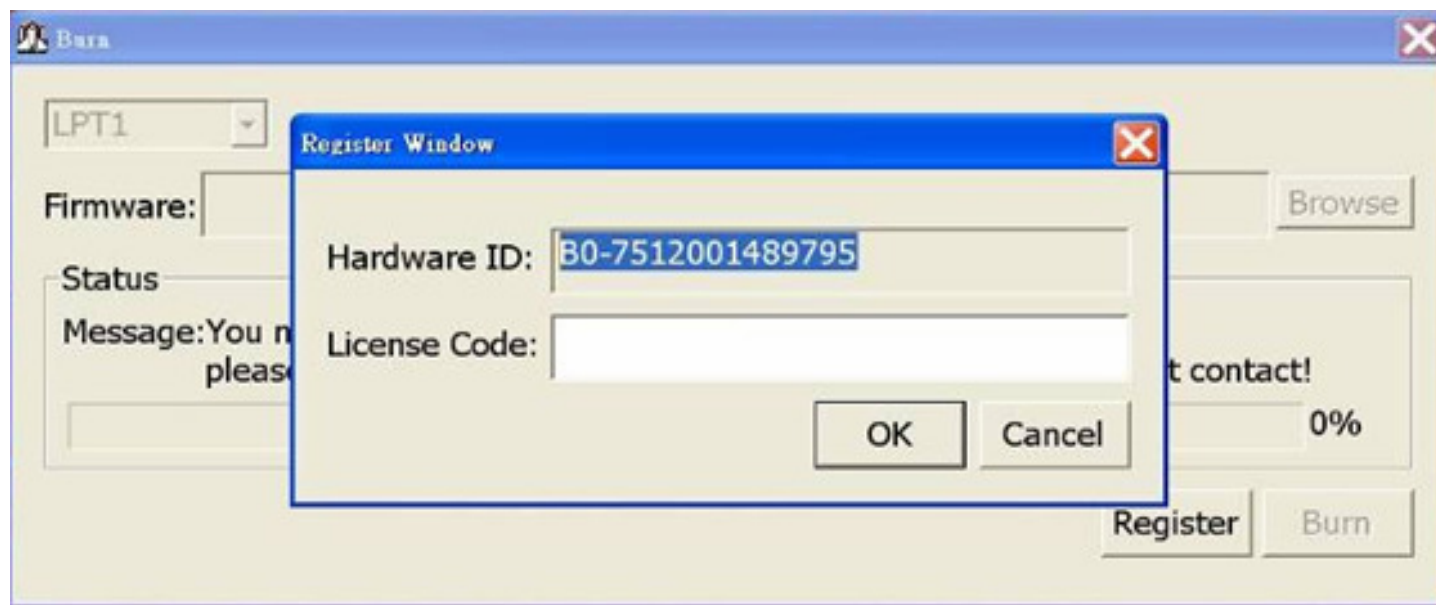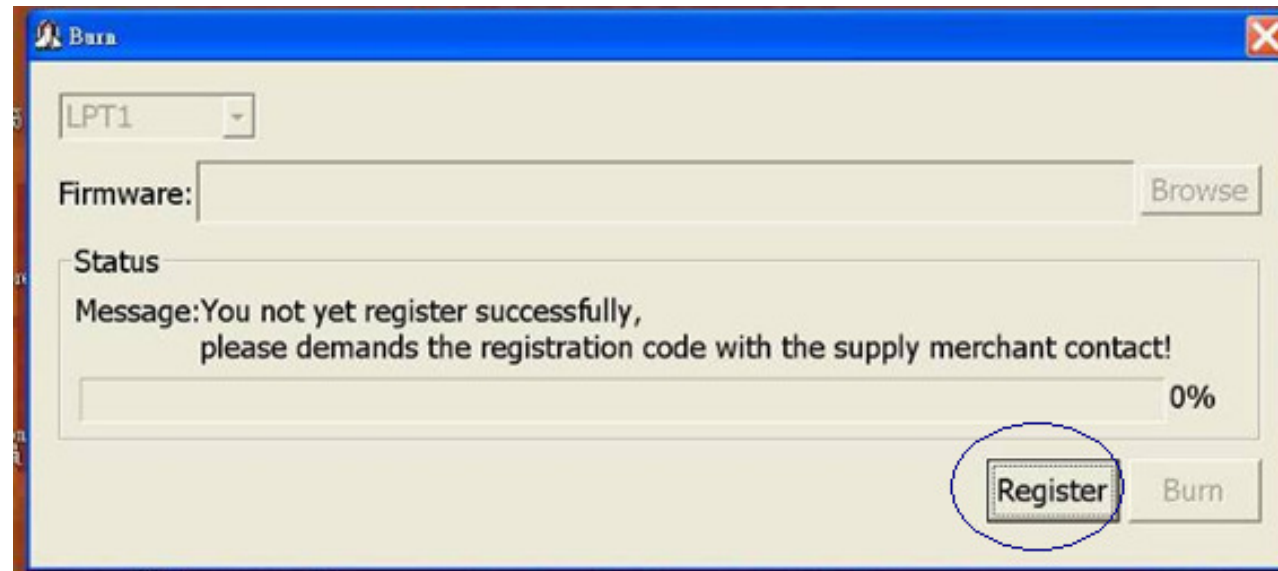


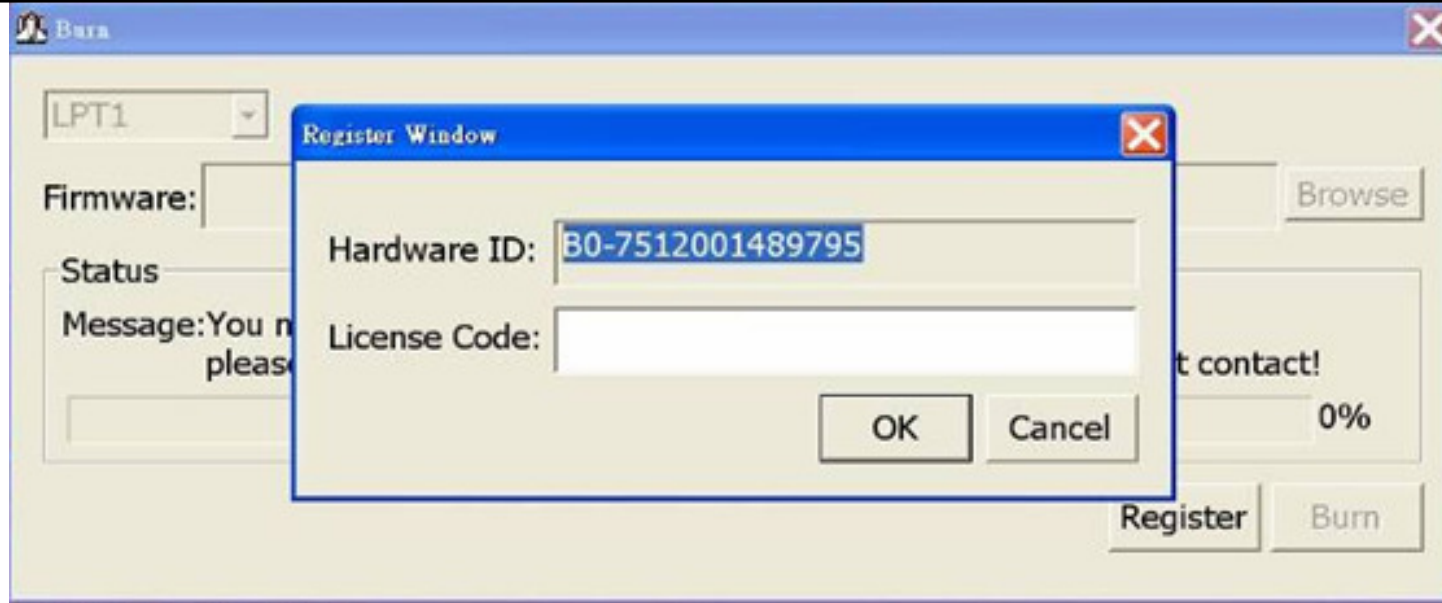


**Step 4: Enter the License Code and click “OK”.**  
**Please RESTART the computer and open the BT file again. (make sure LPT1 is selected)**

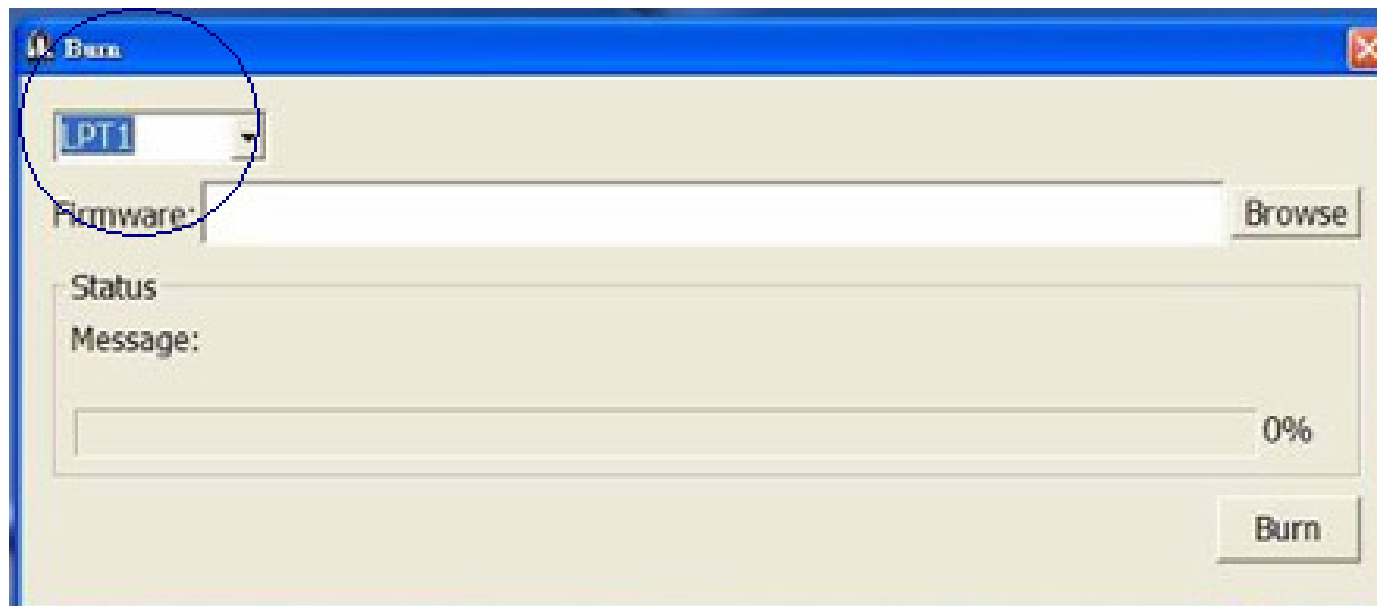

**Step 5 : Click on “Browse”, and select the latest BT firmware (For example: BT\_v200B026.bin)**

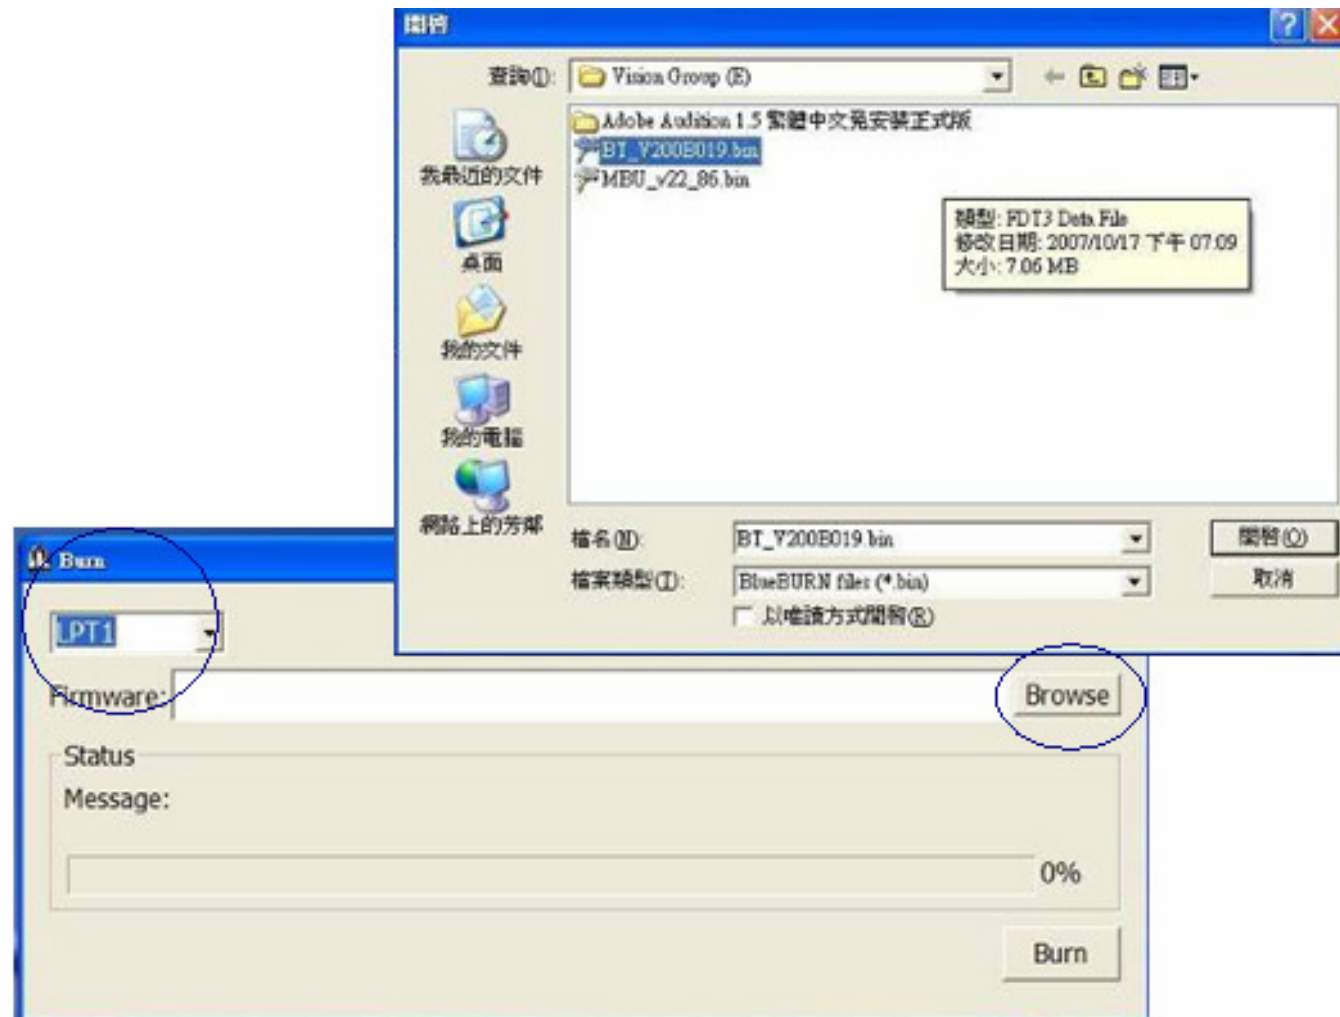

**Step 6: Please press “Burn” without connecting to any cable. It is okay if you see a “file error” message, this indicates the firmware now is stored and ready to burn.**

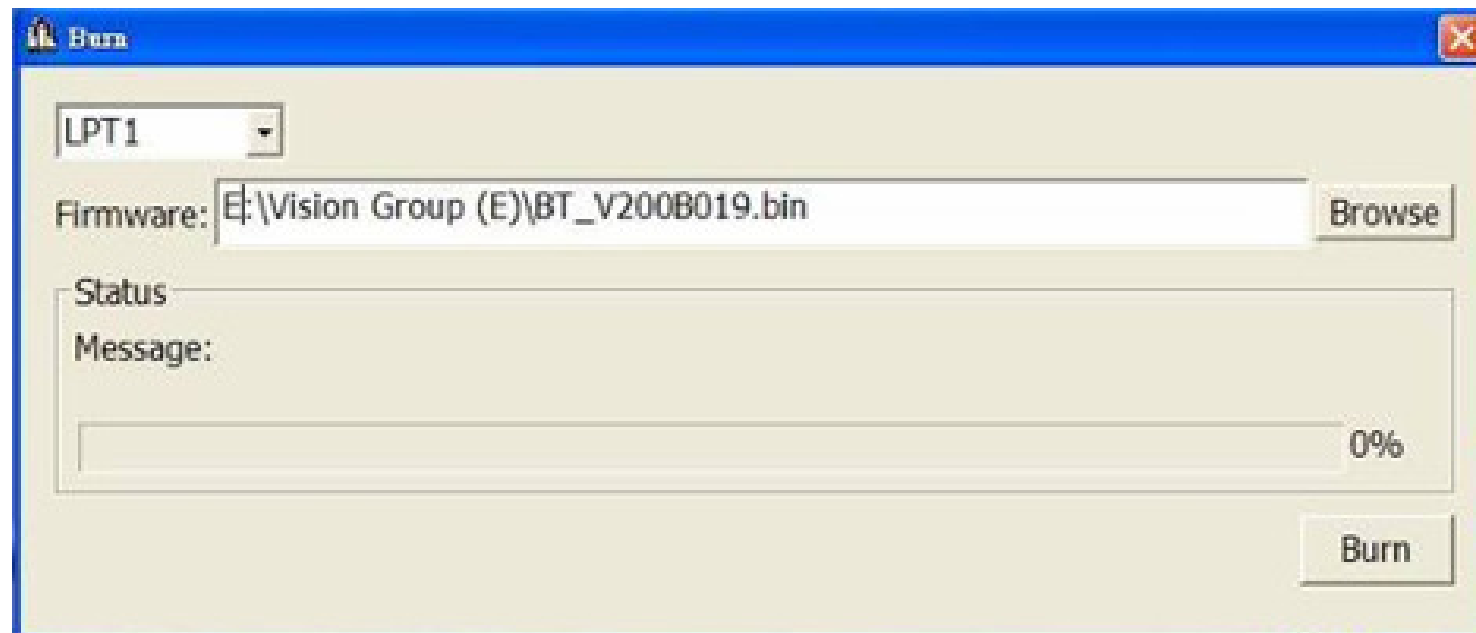

**...Now ready to connect the cables**

**Note : BT Upgrade Cable set includes: upgrade cable, and a standard Nokia charger ( a Nokia 6230/6310 charger can be purchased in any electronic/mobile stores)**



## When doing upgrade, please do the following steps

1. Plug the 25-pin into computer.




2. Plug the other end to the top side of MBU.



3. Power up MBU with a standard Nokia charger.  
**\*(Please note: DO NOT power up MBU before the upgrade cable is connected and the light on MBU SHOULD flash after powering up)**

**Step 7: Press “Burn” again.**

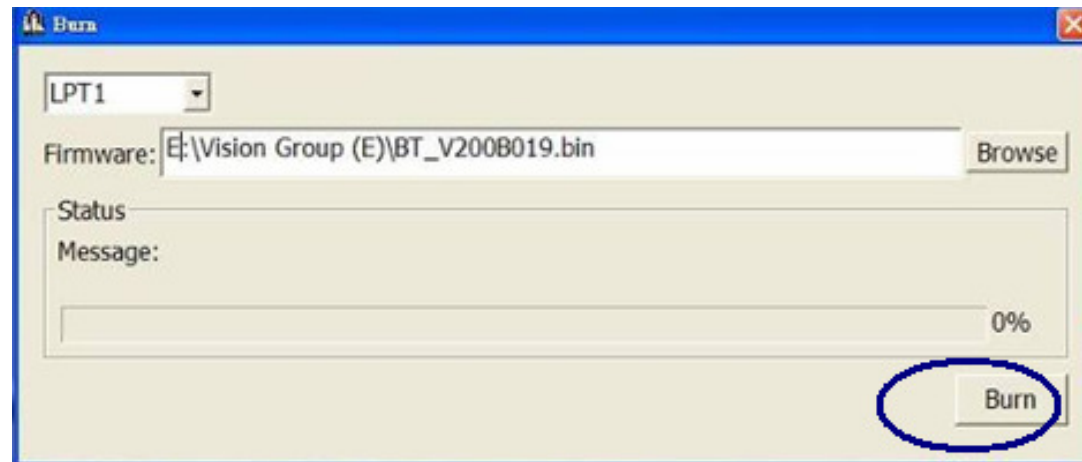

**Step 8: When you reach 100% completion please unplug the Nokia Power first and follow by the upgrade cable.**

**Awesome! you have completed  
the upgrade.**

**THANK YOU!**